

# UNLOCKING METHODS

## For Different Smart Access Applications



By default, TimeTec Security provides 4 types of unlocking methods. However, some applications/scenarios require the use of specific unlocking methods to deliver better experience for the users. The table below summarizes TimeTec Security unlocking methods for different applications.

UNLOCKING METHOD	SMART DOOR	SMART BARRIER	SMART BARRIER + TIMETEC PARKING	SMART TURNSTILE	SMART LIFT	SMART AUTOGATE	SMART LOCK
<p><b>Tap to Unlock</b> (with/without auto pop up)</p>	<b>DEFAULT</b> (without auto pop-up) <sup>1</sup>	<b>DEFAULT</b> (with auto pop-up) <sup>2</sup>	<b>DEFAULT</b> employee only (with auto pop-up) <sup>2</sup>	×	Optional	<b>DEFAULT</b> (with auto pop-up)	<b>DEFAULT</b> (without auto pop-up)
<p><b>Voice Command</b></p>	Optional	Optional	Optional employee only	×	×	Optional	Optional
<p><b>Auto Unlock with timer</b></p>	Optional (3s - 10s) <sup>3</sup>	×	×	×	×	×	Optional (3s - 10s)
<p><b>Scan QR Code</b></p>	Optional	×	<b>DEFAULT</b> for visitor/guest, optional for employee	<b>DEFAULT</b>	<b>DEFAULT</b>	×	×

**NOTE:**

1. Without auto Pop-up – Users have to launch the App while nearby TimeTec BLE-2 and tap the unlock button to send the command. This option is necessary when there are multiple TimeTec BLE-2s close-by to avoid the Mobile App from displaying the Unlock pop-up repeatedly during access.
2. With auto Pop-up – This will allow the Mobile App to display the Unlock pop-up immediately for users to tap and send the unlock command. But users still have to launch the Mobile App (or have it running in the background) while nearby TimeTec BLE-2.
3. Auto Unlock With Timer – The Mobile App will wait for 3s before auto sending the unlock command to the nearby TimeTec BLE-2. If required, users can also adjust the timing duration up to 10s.